

TECHNICAL DATA

Geocel® Polyurethane Gun Cleaner



Geocel® Polyurethane Gun Cleaner has been designed for cleaning applicator guns. It contains an environmentally safe propellant, which complies with the latest EU-regulations banning all CFC-propellants.

The development and manufacture of our products is subject to our approved quality assurance system according to ISO 9001.

APPLICATION

Geocel® Polyurethane Gun Cleaner for applicator guns removes fresh, uncured PU-foam. The can is fitted with an adapter ring, which screws on to the gun. For use without the gun, the can is fitted with a spray head. This dual function meets the requirements of the professional user.

PROPERTIES

Geocel® Polyurethane Gun Cleaner for applicator guns removes and dissolves fresh, uncured PU-foam. The cleaner can's standard-thread adapter fits all commonly used guns. Thorough cleaning of the internal gun mechanism is enhanced by the pressure the propellant exerts. The active ingredients of Geocel® Polyurethane Gun Cleaner are compatible with the materials used in the manufacture of PU foam applicator guns. Frequent use of Geocel® Polyurethane Gun Cleaner maintains them in good working order.

Important information for the general removal of PU foams:

Because Geocel® Polyurethane Gun Cleaner for applicator guns contains acetone, it may dissolve or discolour surfaces such as plastics, lacquers, coatings, paints, textiles etc. Therefore, delicate fabrics and surfaces must always be tested in a concealed area first.

INSTRUCTIONS FOR USE

A suitable waste container and a cloth should be at hand for disposal of waste fluids and wiping away cleaner fluid and dissolved PU foam residues. Remove the PU foam can from the gun. Use the spray head on the Geocel® Polyurethane Gun Cleaner can to clean the adapter part and the outer body of the gun. Remove the red spray head from the Geocel® Polyurethane Gun Cleaner can and carefully screw the can on to the gun. For safety reasons, the gun trigger should be pulled whilst screwing on the cleaner can. This will depressurise the gun.

Pull the trigger to purge the gun. As soon as cleaning fluid appears at the tip of the gun, release the trigger and allow the cleaner to work inside the gun for approximately two minutes, and then flush out the gun into a waste container. Repeat this procedure until only clear cleaner fluid comes from the gun. Once the cleaning procedure is completed, unscrew the Geocel® Polyurethane Gun Cleaner can from the gun.

Important: Only fresh foam can be removed with Geocel® Polyurethane Gun Cleaner. Cured foam can only be removed mechanically.

Note: Sharp instruments must never be used on PU foam applicator guns as this may damage the protective coating of the gun.

SAFETY ADVICE

Geocel® Polyurethane Gun Cleaner is:

HIGHLY FLAMMABLE.

Keep container in a well ventilated place.

In use, may form highly flammable vapour-air mixture. Keep away from sources of ignition - No smoking. Do not breathe vapour and spray. Take precautionary measures against static discharges.

Pressurised container protect from sunlight and do not expose to temperatures exceeding 50°C. Do not pierce or burn, even after use. Do not spray on a naked flame or any incandescent material.

KEEP OUT OF REACH OF CHILDREN.

USE ONLY IN WELL VENTILATED AREAS.

Vapours gathering in insufficiently ventilated areas may cause flammable and noxious concentrations.

Geocel® Polyurethane Gun Cleaner

CI/Sfb:Yt4

July 2017

DELIVERY FROM

500ml aerosol cans.

Carton: 12 cans each.

Store cans upright.

We reserve the right to make physical and chemical changes to our products from time to time as a result of technical development and research.

Important Note: The information contained herein is offered in good faith and is believed to be accurate. However, because conditions and methods of use of our products are beyond our control, this information should not be used in substitution for customer's tests to ensure that Geocel's products are safe, effective and fully satisfactory for the intended end use. Suggestions of use shall not be taken as inducements to infringe any patent.

Geocel's sole warranty is that the product will meet the Geocel sales specifications in effect at the time of shipment.

Your exclusive remedy for breach of such warranty is limited to refund of purchase price or replacement of any product shown to be other than as warranted.

Geocel specifically disclaims any other express or implied warranty of fitness for a particular purpose or merchantability.

Geocel disclaims liability for any incidental or consequential damage.

