



## REPAIR SPUR INSTALLATION

**To repair a wooden fence post that has rotted at the base or below ground level:**

1. Dig out a tight hole about 450/600mm deep against the rotted post, dig deeper for taller posts.
2. Place the concrete repair spur in the hole and mark up the bolt holes.
3. Remove the spur and drill the holes through the wooden post.
4. Place spur in hole and fix it to the wood post with bolt, nut and washer.
5. Check the post is upright and level.
6. Fill the hole with post mix and concrete in.

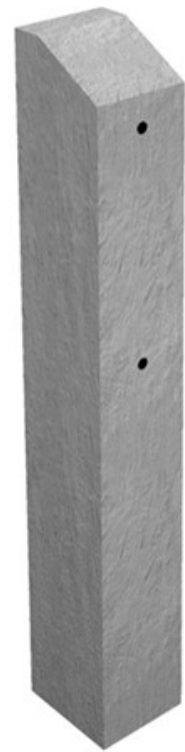

**NB - You can use 150mm coach screws instead of bolts if required.**

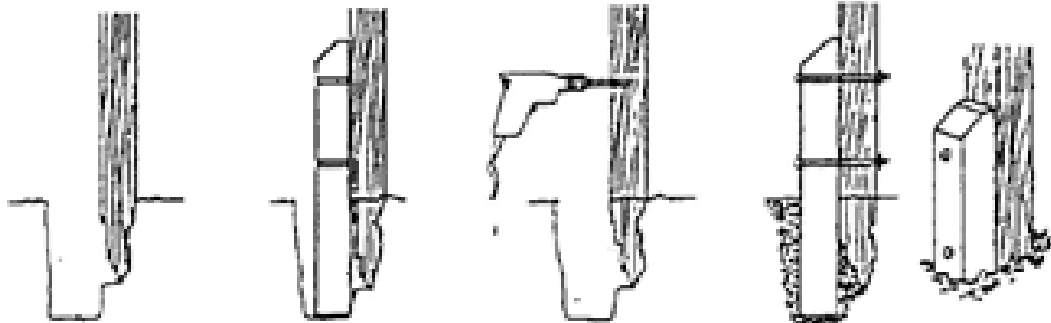

**Dig hole about 450/600mm deep against post**

**Place spur in hole and mark bolt hole positions**

**Remove spur and drill post keeping level and straight**

**Replace spur and bolt to post. Fill hole with rubble and concrete. Check post is upright**